

VI.5.3D-UPWE PROGRAM FCST HCL TECHNIQUE UPWE

Purpose

Technique UPWE sets whether water equivalent data will be used to update Operation SNOW-17.

Valid values are NO (0) and YES (1).

The Global default is YES (1).

This Technique is Nonuniversal.

Form of Input

UPWE(integer)

where integer is 1 or 0 specifying whether to use water equivalent data to update Operation SNOW-17

Example

UPWE(0)

Water equivalent data will not be used to update Operation SNOW-17.